

Mulled Wine

Urn

**giles &
posner®**

INSTRUCTION MANUAL

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
Do not pull or carry the appliance by its power supply cord.
Do not use the appliance for anything other than its intended use.
Do not use any accessories other than those supplied.
Do not use this appliance outdoors.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not move the appliance whilst it is in use.
Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.
Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.
Always unplug the appliance after use and before any cleaning or user maintenance.
Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.
Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
Use of an extension cord with the appliance is not recommended.
This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.
This appliance is intended for domestic use only. It should not be used for commercial purposes.
The outer surface or door may get hot during operation.

 **Caution:** Hot surface – do not touch the hot section or heating components of the appliance.

Warning: Keep the appliance away from flammable materials. Hot liquids and steam can cause serious injury; exercise extreme caution when using this appliance. Always use with care and never touch hot liquids directly.

Boil-dry Sensor

If the wine urn is accidentally turned on while empty, the boil-dry sensor will activate causing the power to switch off. Do not try to use the wine urn during this time; once it has cooled down, it will resume its normal function.

Removing Limescale

STEP 1: Fill the wine urn with 2 litres of cold water.

STEP 2: Add a commercial descaling agent to the wine urn, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the wine urn.

If the wine urn switches off before it has boiled or a white deposit is noticed on the inside of the wine urn, it needs to be descaled.

Care and Maintenance

Before attempting any cleaning or maintenance, unplug the wine urn from the mains power supply and allow it to cool fully. Always detach the power cord before cleaning.

STEP 1: Wipe the wine urn housing with a damp cloth and dry thoroughly.

STEP 2: Clean the interior with warm, soapy water, then rinse and dry thoroughly. Make sure that water does not come into contact with any electrical components.

STEP 3: Before boiling any liquids for drinking, always boil clean water for approx. 30 minutes to remove any residual odours or materials from manufacturing following the instructions in the section entitled 'Using the Hot Cider & Mulled Wine Urn'. Discard this water and clean the wine urn before use.

Do not immerse the wine urn in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the wine urn or its accessories, as this could damage the surface.

Note: The wine urn should be cleaned after every use.

Description of Parts



- | | |
|--|----------------------------|
| 1. Hot Cider & Mulled Wine Urn housing | 6. Heating indicator light |
| 2. Urn lid | 7. Cool-touch handle |
| 3. Temperature control dial | 8. Carry handles |
| 4. On/Off switch | 9. Tap |
| 5. Keep warm indicator light | 10. Max. fill mark |

Instructions for Use

Before First Use

STEP 1: Before connecting to the mains power supply, wipe the wine urn housing with a damp cloth and dry thoroughly.

STEP 2: Clean the glass interior with warm, soapy water and rinse thoroughly.

Do not immerse the wine urn in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the wine urn or urn lid, as this could cause damage.

Note: When using the wine urn for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the wine urn.

Using the Hot Cider & Mulled Wine Urn

STEP 1: Remove the urn lid by twisting and lifting it away from the wine urn housing.

STEP 2: Place the wine urn in the location where it will be used and check that it is level and stable. The wine urn should not be moved once full.

STEP 3: Fill the wine urn with cider or mulled wine until it reaches the desired level. Do not exceed the max. fill mark. Replace the urn lid by twisting it into place.

STEP 4: Plug in and switch on the wine urn at the mains power supply. The keep warm indicator light will illuminate.

STEP 5: Select a temperature setting by rotating the temperature control dial in a clockwise direction. The heating indicator light will illuminate whilst the wine urn is heating up. Depending on the volume of liquid and the selected temperature setting, it may take up to 30 minutes for the wine urn to fully heat up.

STEP 6: Once the target temperature is reached, the heating indicator light will turn off and the keep warm light will illuminate again. During use, the heating indicator light will cycle on and off to indicate that the wine urn is maintaining the selected temperature.

STEP 7: To dispense liquid, use the tap at the bottom of the wine urn. Press and hold the tap downwards to dispense liquid. For continuous pouring, flip the tap upwards. Once the desired amount of liquid is dispensed, return the tap to neutral position.

STEP 8: During use, the liquid level may become too low. This can be monitored using the fill gauge. If the wine urn requires topping up, open the lid using heatproof gloves. Be sure to keep the face away from the wine urn as steam may be released. Top up the wine urn as required, replace the lid, and wait for the liquid to heat up to the selected temperature.

STEP 9: To turn off the wine urn, rotate the temperature control dial in an anticlockwise direction to the 'Off' position.

STEP 10: Switch off and unplug the wine urn from the mains power supply and allow to cool. This may take some time if there is still hot liquid inside. Once cool, empty the wine urn and store safely.

Note: Never place the wine urn on a surface that cannot easily support its weight. When filled to the max. fill mark, the wine urn weighs approx. 9 kg.

The wine urn should not be used without the lid.

Other liquids can be heated in the wine urn; always refer to specific manufacturer instructions or recipes for the proper heating temperature, and never heat volatile or flammable liquids.

Caution: Never move the wine urn while it contains hot liquid.

The wine urn gets very hot during use; always use heat-resistant gloves to avoid injury, and do not touch any part of the wine urn other than the cool-touch handles or tap.

Warning: Exercise caution while heating liquid; the wine urn may emit steam.

Temperatures above 90 °C may cause liquid to boil over if left unmonitored. Never leave liquid to boil at high temperatures for long periods of time unattended, and decrease the temperature setting if

any boiling over is observed. Setting the wine urn to 110°C will not cause liquid to boil faster.

Storage

Check that the wine urn is cool, clean and dry before storing in a cool, dry place.
Never wrap the cord tightly around the wine urn; wrap it loosely to avoid causing damage.

Specifications

Product code: EK2907

Input: 220–240 V ~ 50–60 Hz

Output: 1500 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ($\perp$)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked $\perp$.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\perp$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

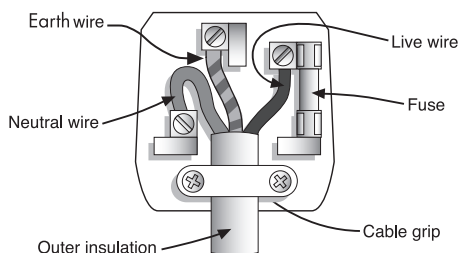

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.gilesandposner.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Giles and Posner will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester
OL9 0DD, UK.
Made in China.

Please retain all instructions for future reference.

Made in China.

CD140818/MD110320/V2